
ASSEMBLY INSTRUCTIONS

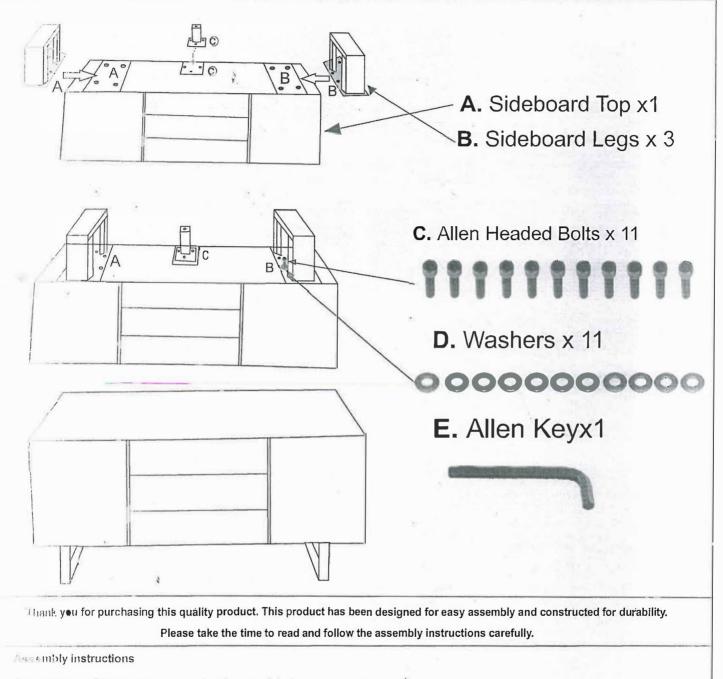

1. Ensure that all parts are present using the parts list above

a jovert the Sideboard top (A) ensuring that it will not get scratched or marked.

Note: the letter label on each leg (B), then place then leg in the corresponding lettered corner of the Sideboard Top (A) as shown in the diagram above.

Align the pre drilled holes in the leg (B) with the pre drilled holes in the Sideboard Top (A).

5 Insert the Allen bolts (C) from the inside through the holes in the corners of the Sideboard (A) first placing a washer (D)

we the thread and then hand tightening the bolt into the leg (B). Tighten the bolt with the Allen Key (E) provided.

Continue to tighten until the leg (B) is held firm but do not over tighten.

state and Use

Of an with a non-abrasive cleaner and soft damp cloth.

the not allow the table to get wet.

bo not drag the Side Board to move it.

Ensure that all Bolts are tightened before use. Check and tighten all Bolts periodically throughout use of the product