






# ASSEMBLY INSTRUCTION


MODEL : PCT 1800







PART	QTY
A 	24 SETs

PART	QTY
C WOOD DOWEL M8 x 30mm 	4 pcs


Tools Required
 HAMMER
 SCREWDRIVER

PART	QTY
B 	5 pcs


PART	QTY
D 	4 pcs

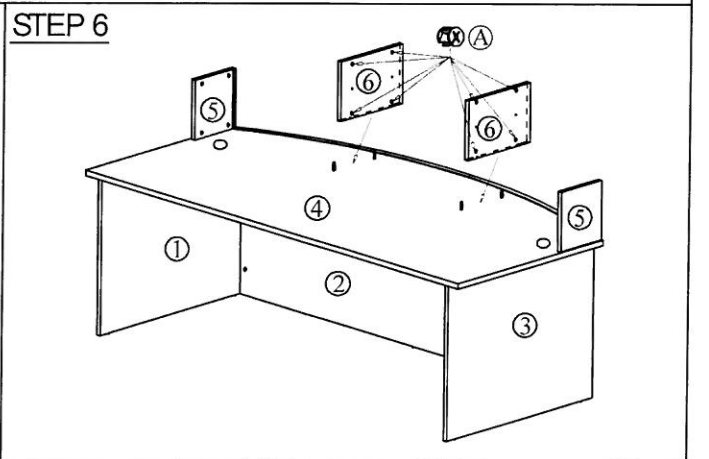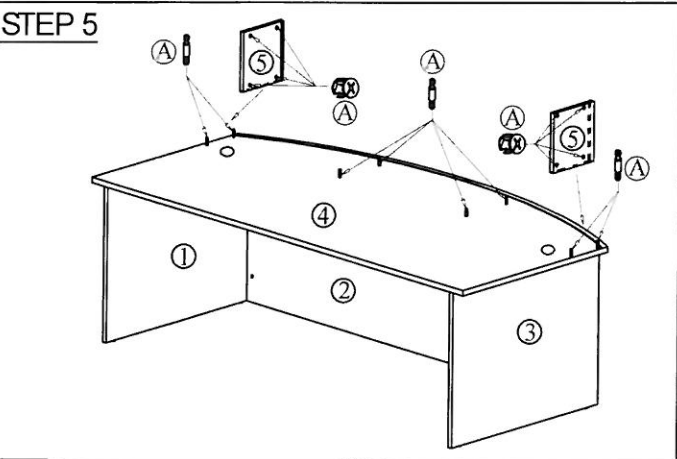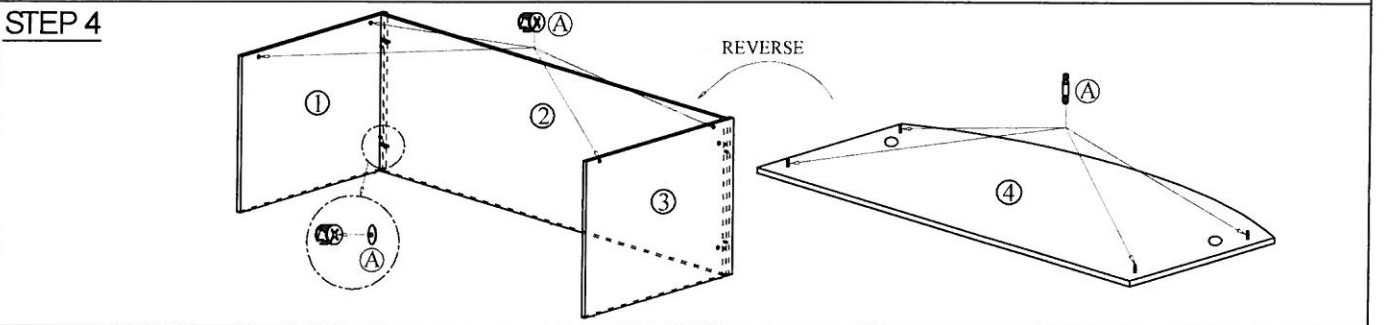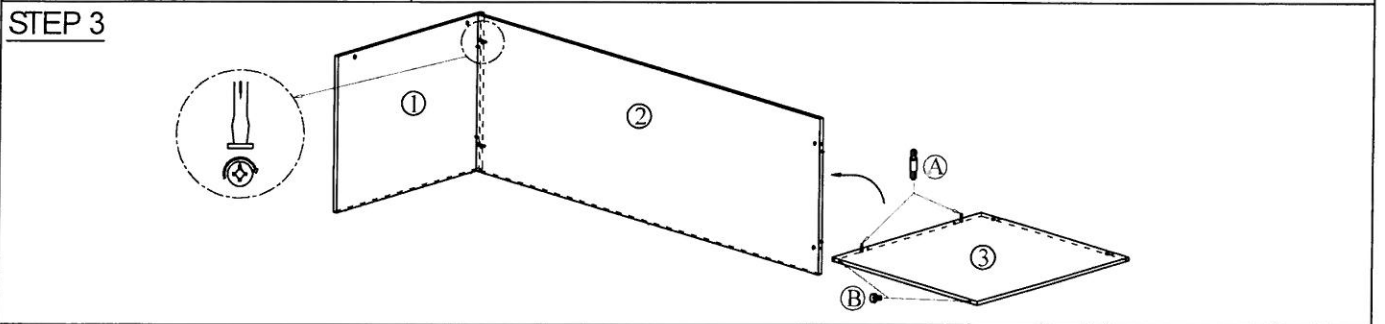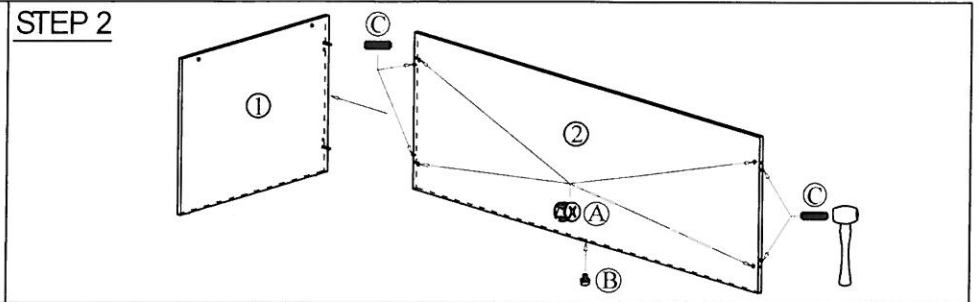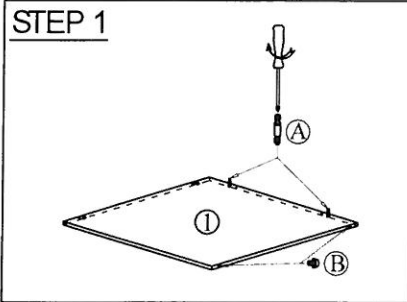


STEP 7

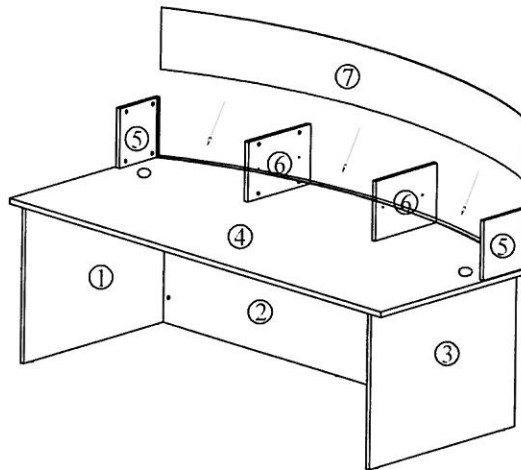

STEP 8

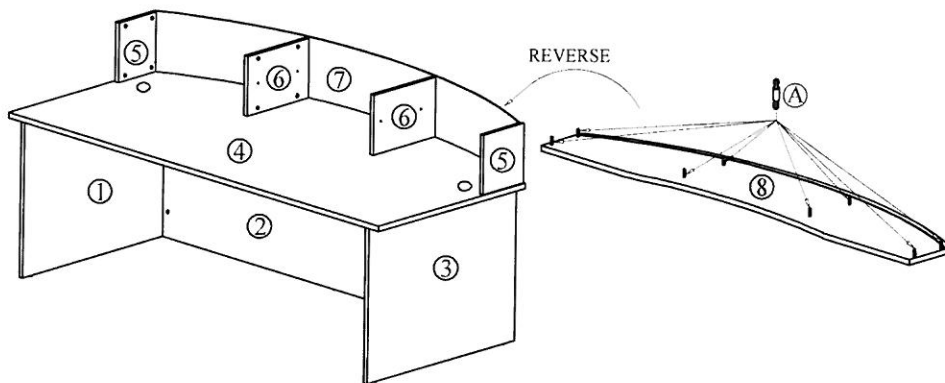

STEP 9

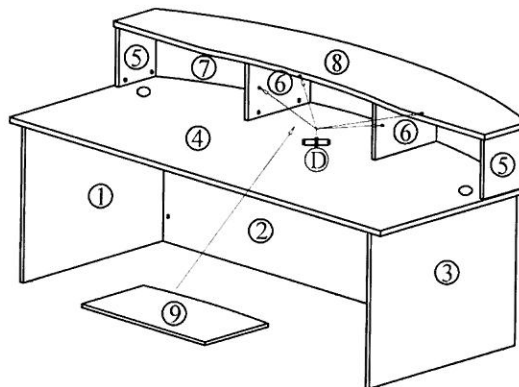

FINISHING

