


ASSEMBLY INSTRUCTION

MODEL : EM 345,1


DESCRIPTION : TV CABINET

HARDWARE	A	B	C	D	E	F	G	H	I	J	K	L
	WOOD DOWEL 8 X 25	CSK CAP WOOD M6X50MM	MINIFIX 5654+5546	QUICKFIT CAP	ALLEN KEY	CB SCREW M3.5X16MM	CB SCREW M4X25MM	MAGNET PLATE (1 HOLE)	DOOR SUPPORT SPRING	HANDLE 108 -160MM (PVC)	NAIL 5/8	5038 PVC LEG
	28	8	20 SETS	20	1	20	4	2	4	2	24	5


PART LIST

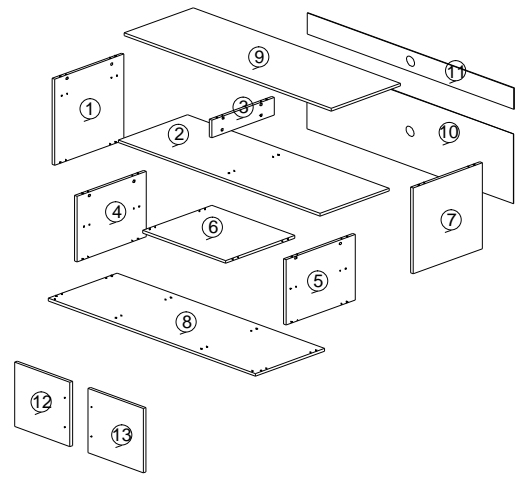


STEP 1

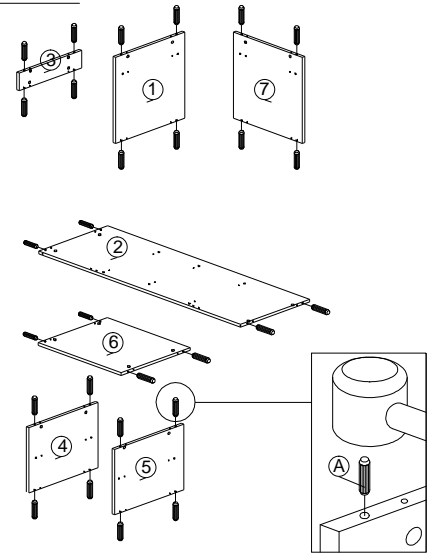


STEP 2

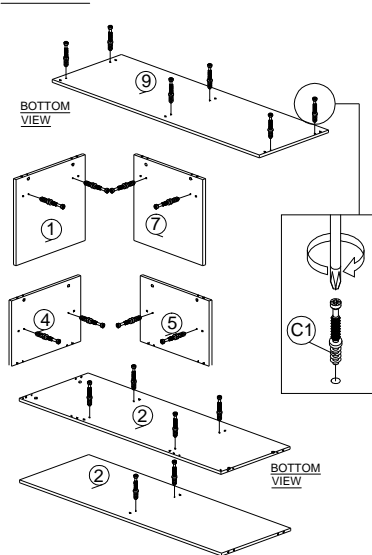


STEP 3

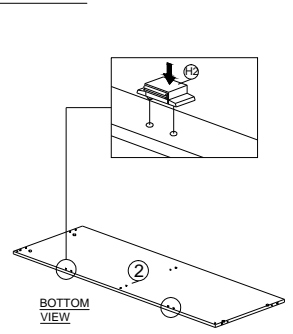


STEP 4

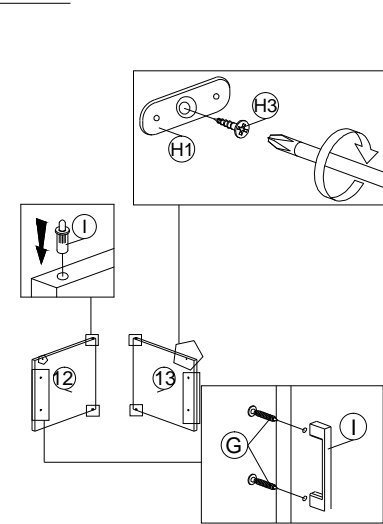


STEP 5

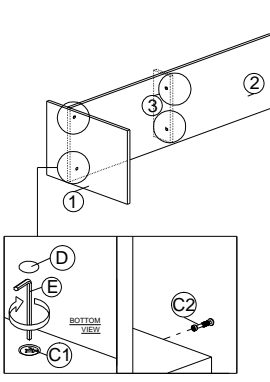


STEP 6

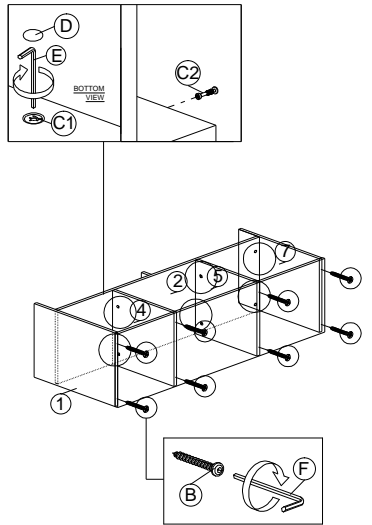


STEP 7

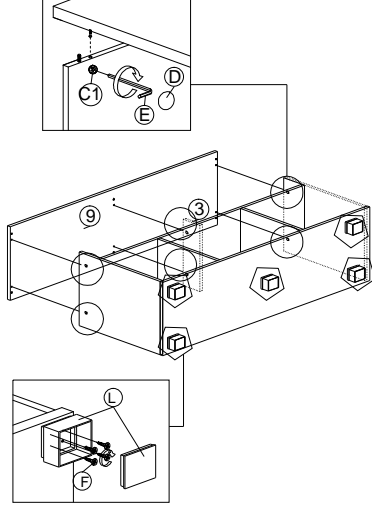

STEP 8

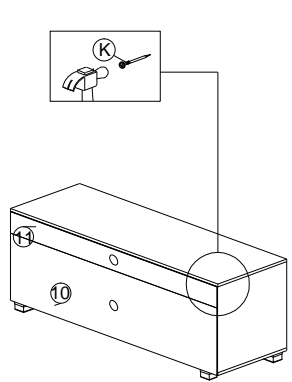

STEP 9

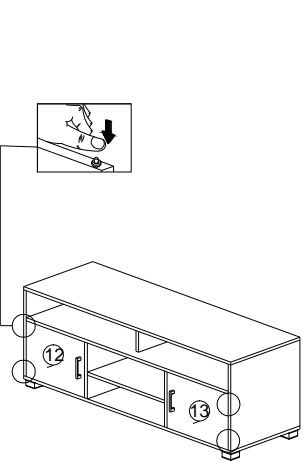

COMPLETED

