

SOFT, DRY CLOTH



CHEMICAL




HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION


MODEL : E 8703,1

DESCRIPTION : TV CABINET


HARDWARE

<b>A</b>  WOOD DOWEL M8 X 25 28	<b>B</b> B1 B2  MINIFIX 5654+5546 24	<b>C</b>  MINIFIX CAP 24	<b>D</b>  CB SCREW M3.5X16MM 36	<b>E</b>  CB SCREW M4X25MM 8	<b>F</b>  CB SCREW M4X38MM 24	<b>G</b>  CSK CAP WOOD M6X50MM 12	<b>H</b>  L KEY M4 1	<b>I</b>  HANDLE 010 3	<b>J</b>  HANDLE SCREW M4X32MM 6	<b>K</b>  NAIL 5/8 65	<b>L</b>  DRAWER SLIDE 14" 3 SETS
---	--	--------------------------------------	---	--	---	--	-------------------------------	------------------------------------	---	--------------------------------	--


## PART LIST

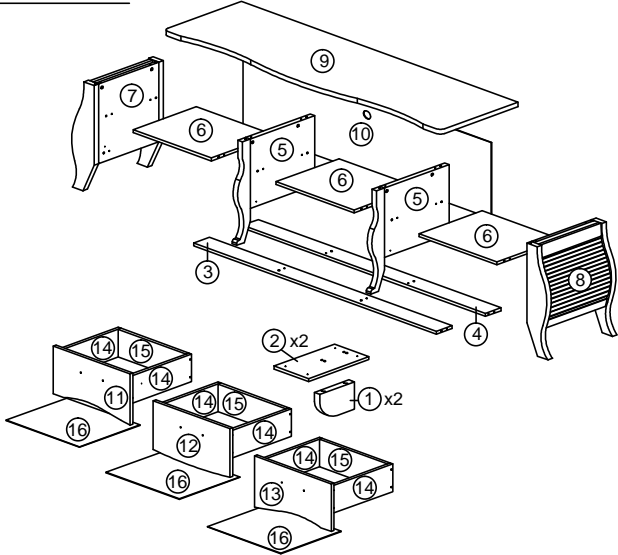


## STEP 1

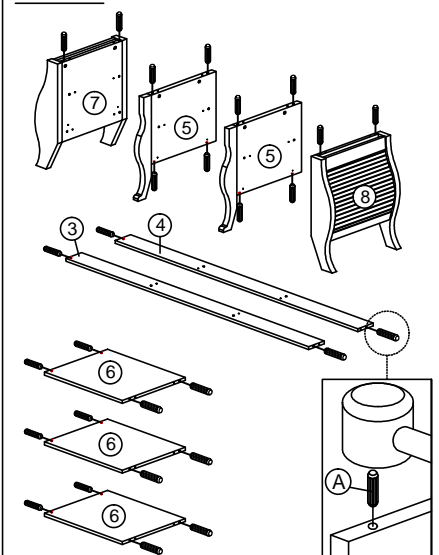


## STEP 2

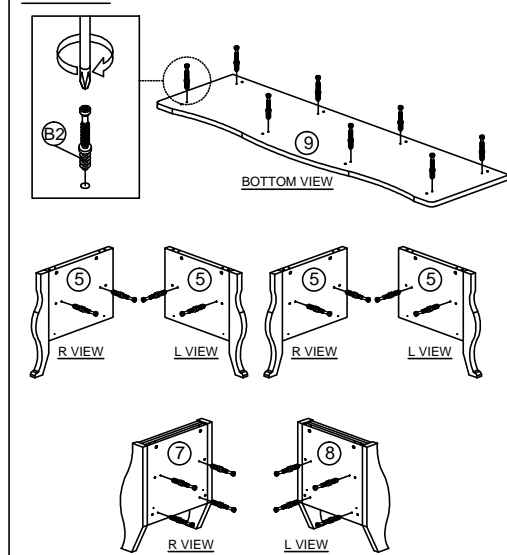


## STEP 3

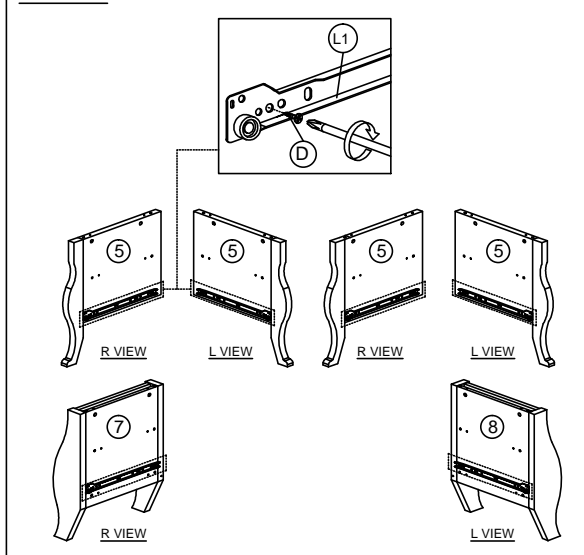


## STEP 4

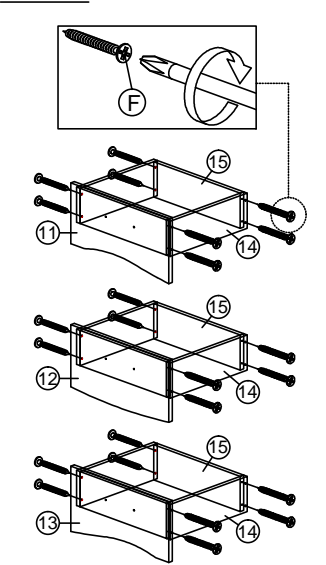


## STEP 5

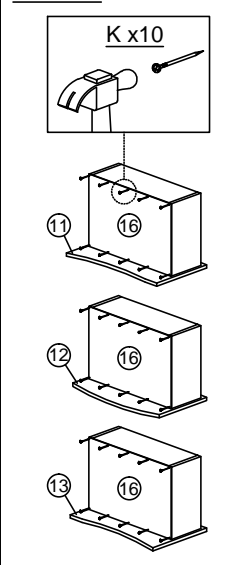


## STEP 6

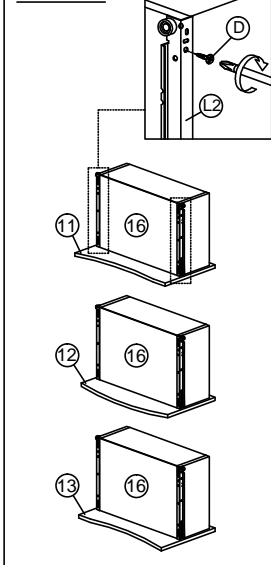


## STEP 7

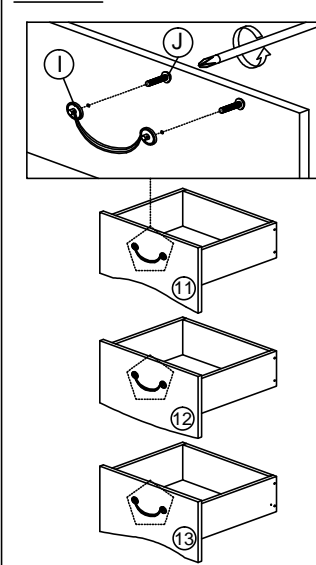


## STEP 8

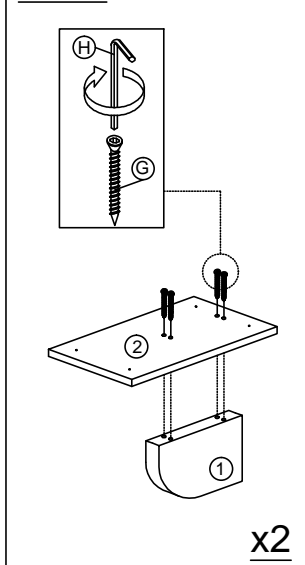

## STEP 9

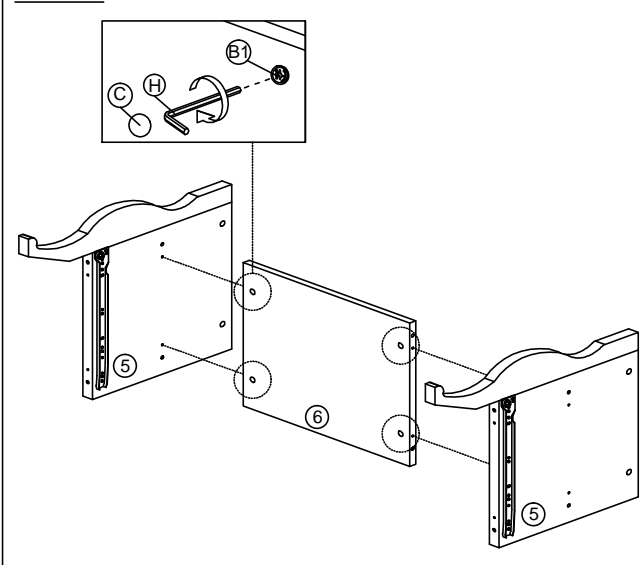





# ASSEMBLY INSTRUCTION


MODEL : E 8703,1

DESCRIPTION : TV CABINET


## STEP 10

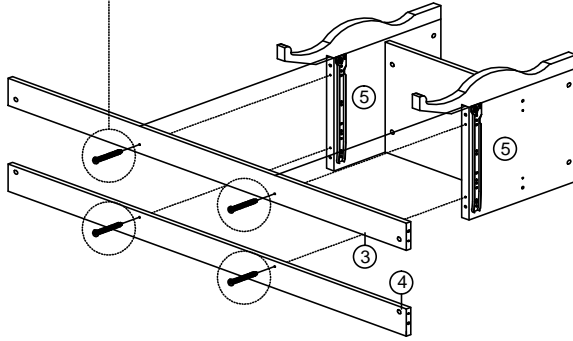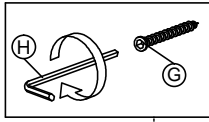



## STEP 11

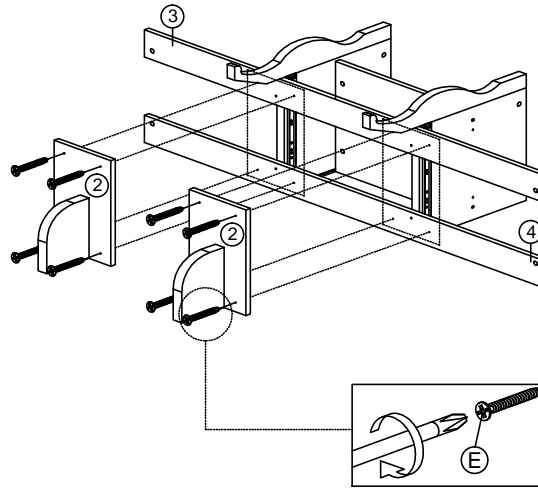



## STEP 12

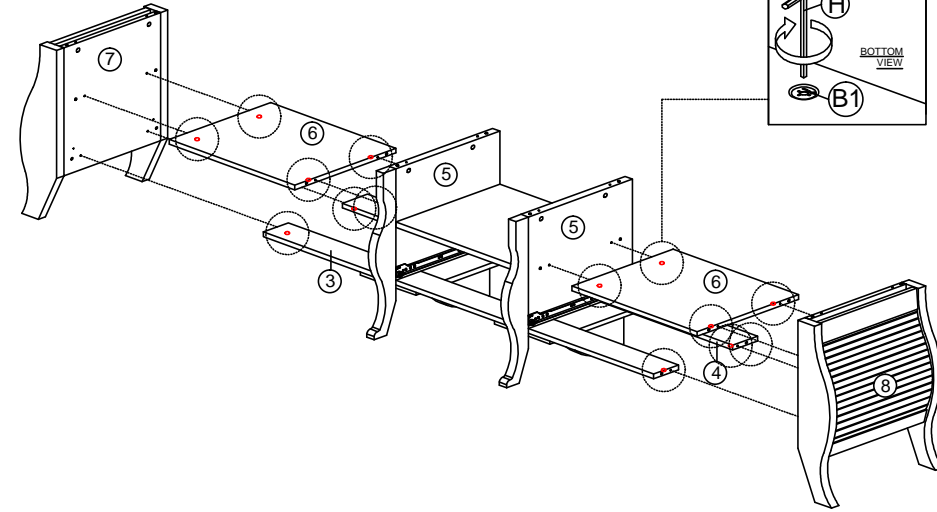

## STEP 13

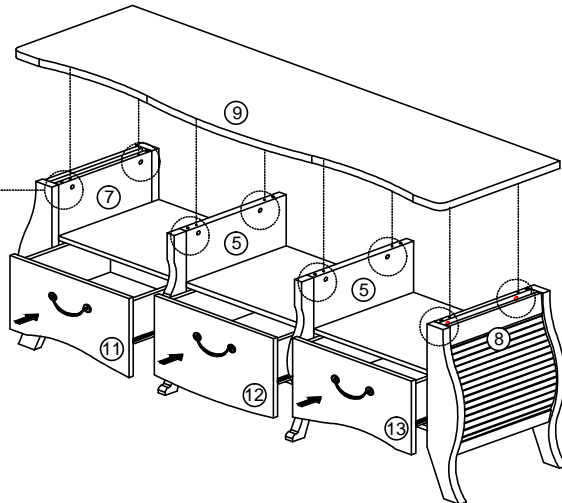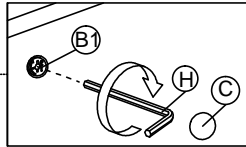

## STEP 14

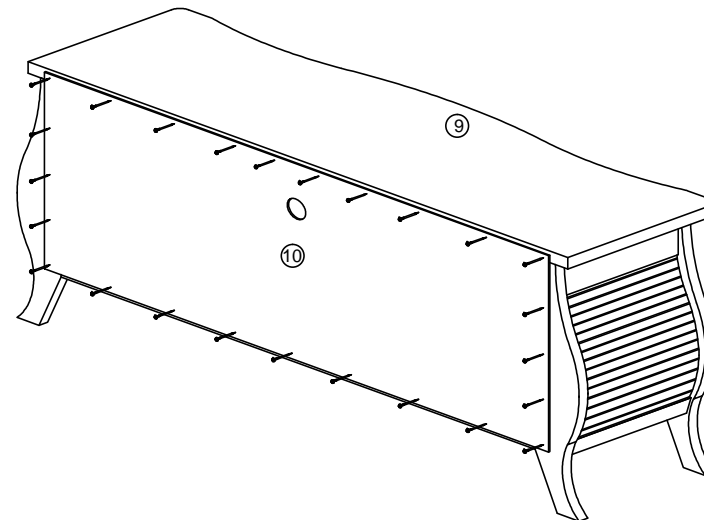

## COMPLETED

