









# ASSEMBLY INSTRUCTION

PART	QTY	PART	QTY	PART	QTY	<i>Tools Required</i>
A  ADJUSTABLE LEG STOPPER	4 Pcs	B  WOOD DOWEL M8 x 30mm	12 Pcs	C   EURO BOLT HOUSING	4 SETs	 HAMMER  SCREWDRIVER


## STEP 1




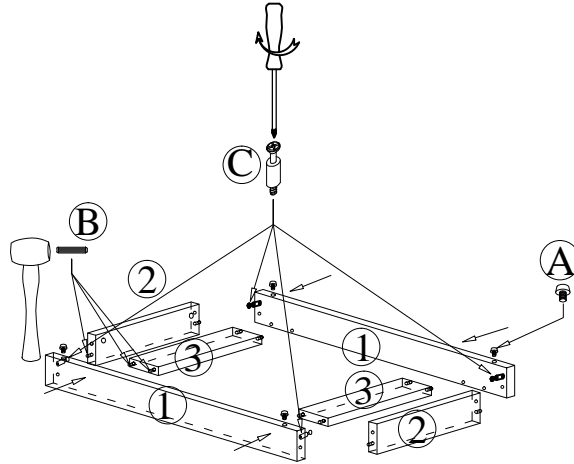




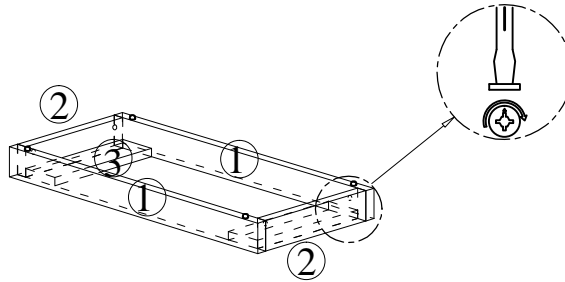
## STEP 2

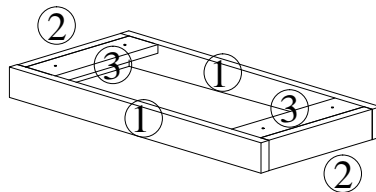


## FINISHING




# ASSEMBLY INSTRUCTION

PART	QTY	PART	QTY	PART	QTY
A	12 Sets	C	4 Pcs	E	1 Pc
 CAP EURO BOLT		 CSK M4 x 45mm		 ALLEN KEY	
				<i>Tools Required</i>	
B	8 Pcs	D	4 Pcs	 HAMMER	 SCREWDRIVER
 WOOD DOWEL M8 x 30mm		 SHELF SUPPORT			


## STEP 1

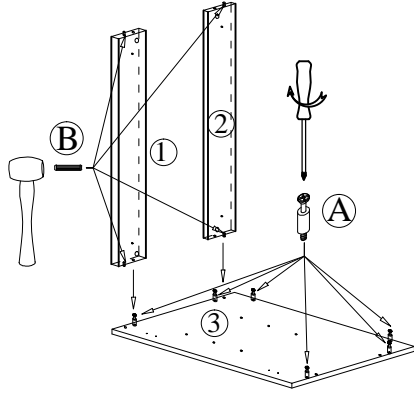


## STEP 2

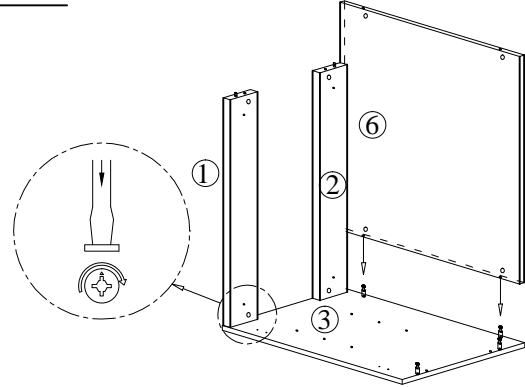


## STEP 3

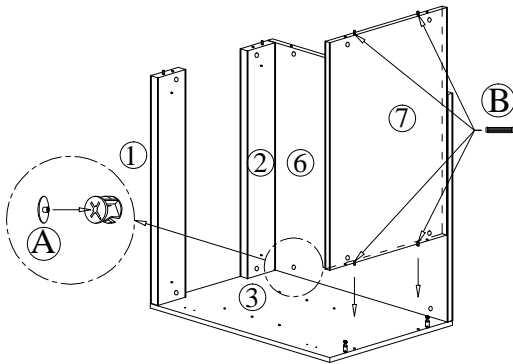

## STEP 4

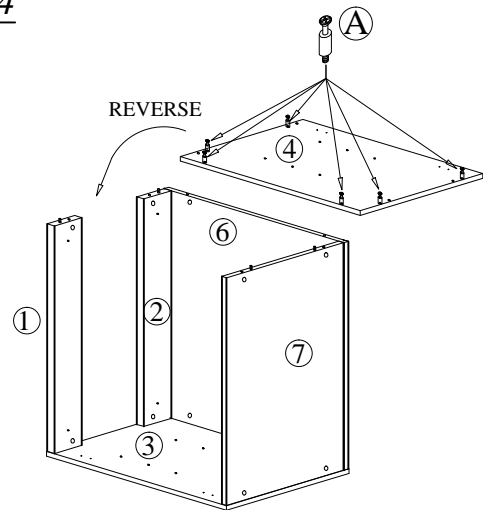

## STEP 5

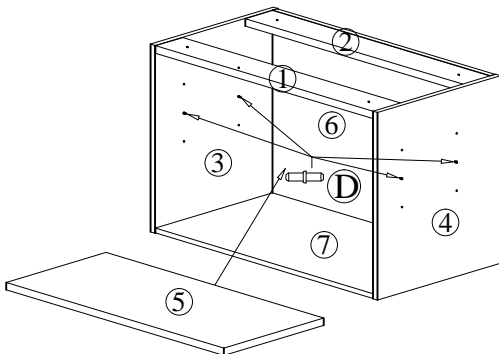

## FINISHING

