




SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE










DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION

MODEL : E 7349,2

DESC: DOUBLE BED

HARDWARE	A	B	C	D	E	F	G	H	I	J	K
	A1 A2 MINIFIX 5654+5546	Ⓞ MINIFIX CAP	Ⓞ WOOD DOWEL 8 X 25	Ⓞ CSK CAP WOOD M6X50MM	Ⓞ CB SCREW M3.5x16MM	Ⓞ JCBB BOLT M8X50MM	Ⓞ L KEY M4	Ⓞ L KEY M5	Ⓞ CB SCREW M4X38MM	Ⓞ TAD BRACKET 01	Ⓞ L BRACKET
	22 SETS	22	10	11	32	2	1	1	12	2	4

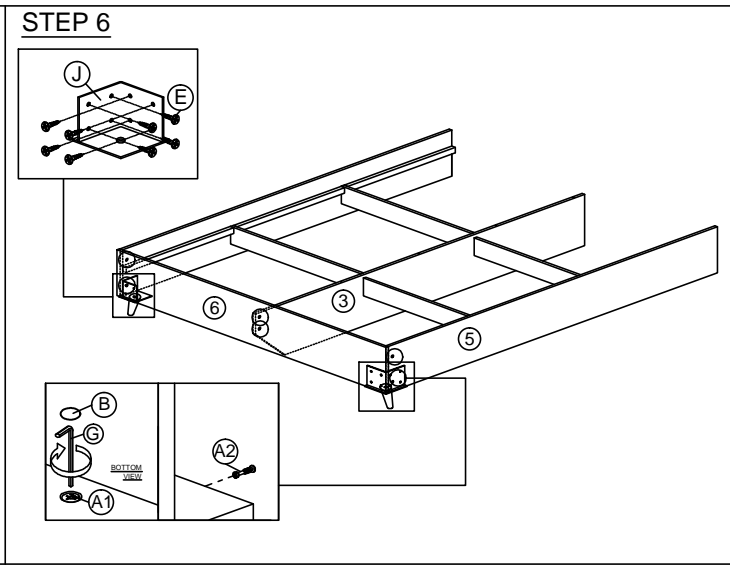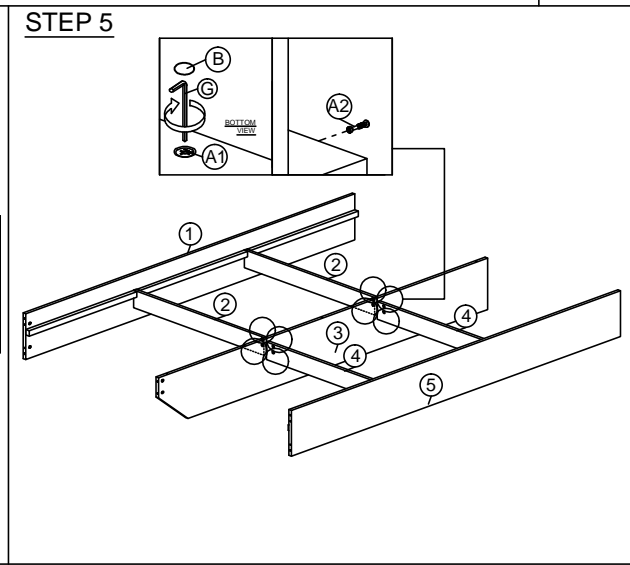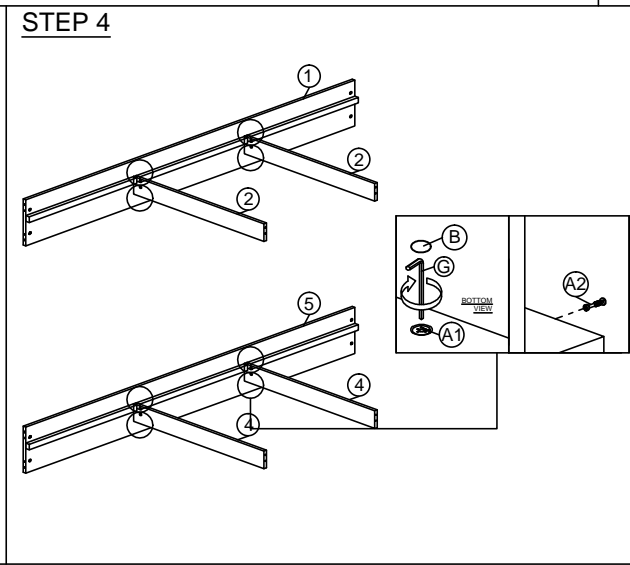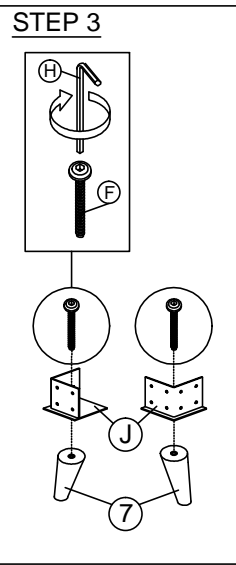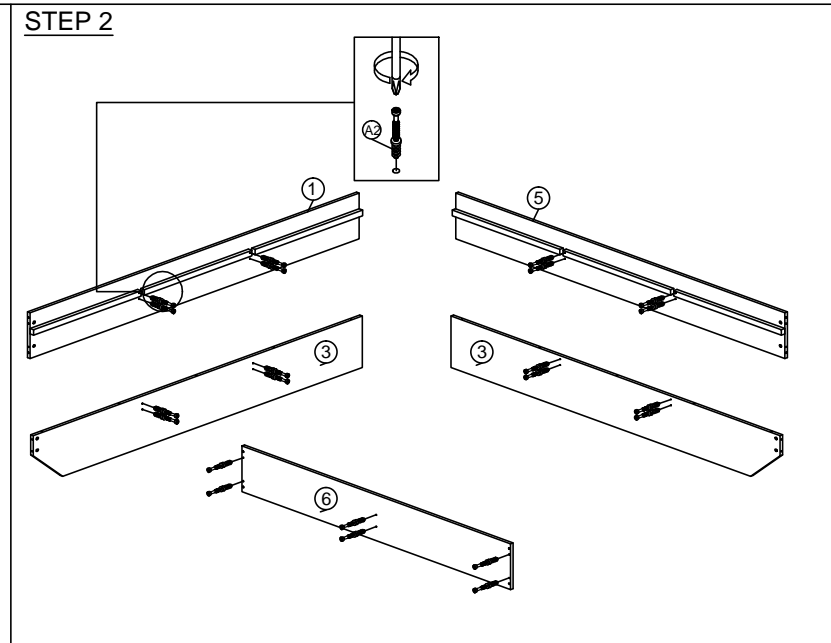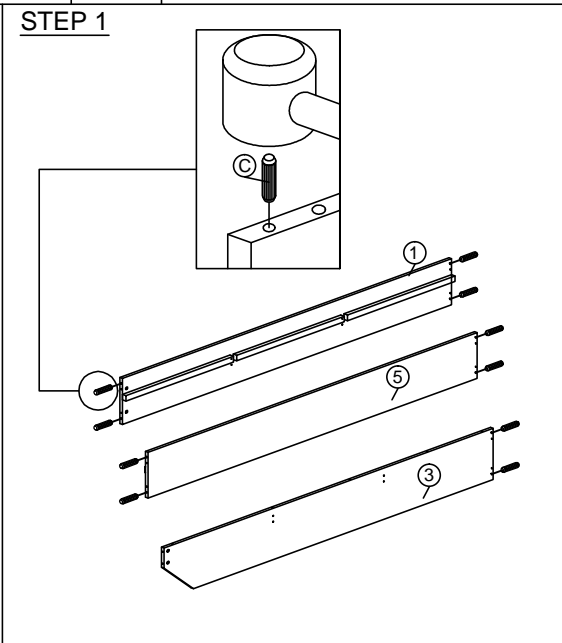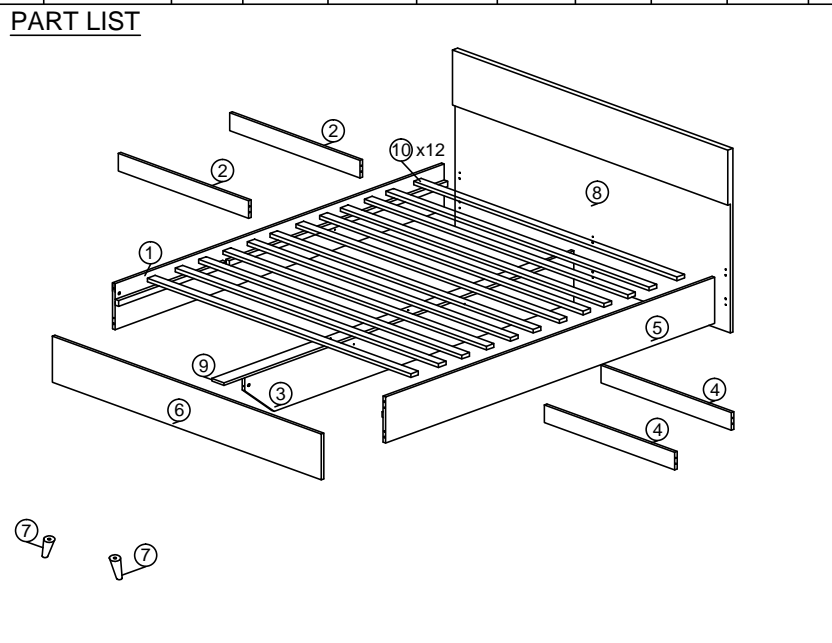




SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION


MODEL : E 7349,2

DESC: DOUBLE BED


## STEP 7

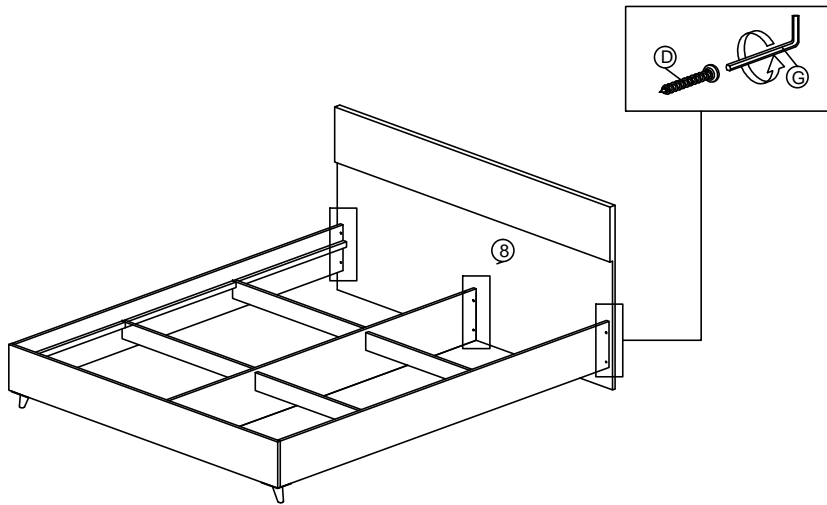

## STEP 8

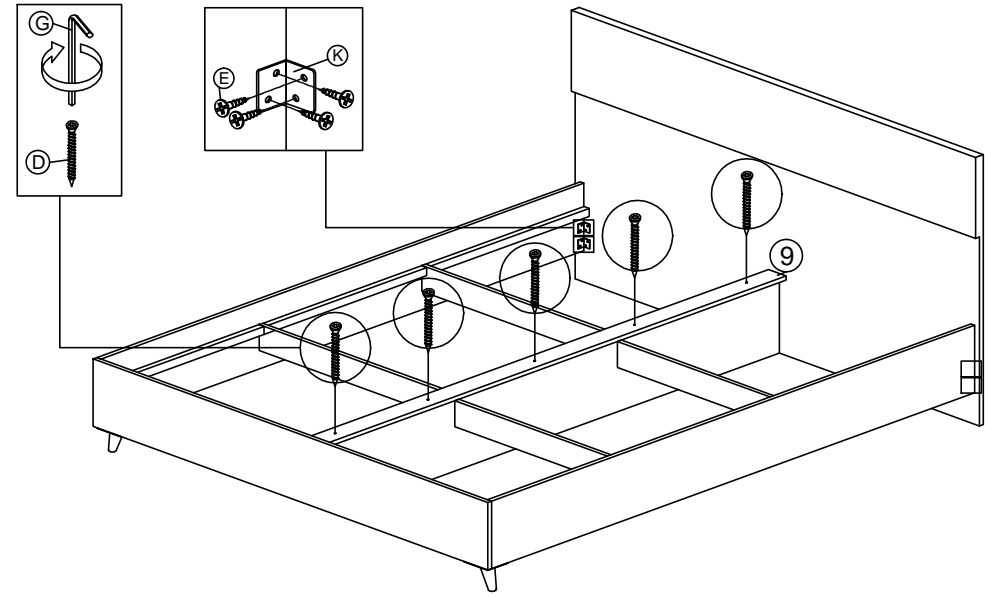

## STEP 9

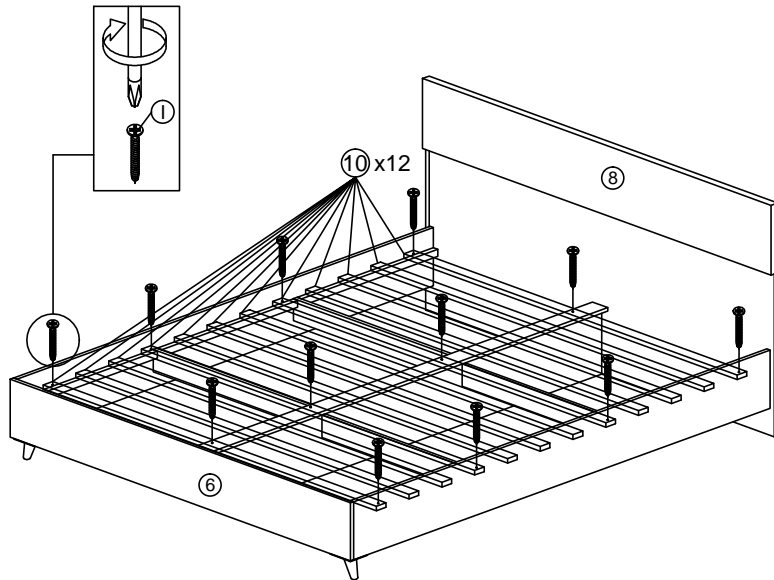

## COMPLETED

