





ΟΔΗΓΙΕΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ

[A] x 1 τεμ

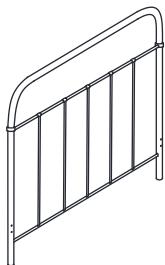

[B] x 2 τεμ

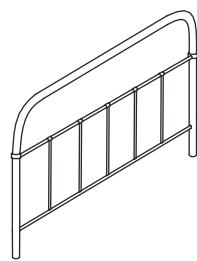

[C] x 2 τεμ




[F] x 24 τεμ

[E] x 3 τεμ



[H] x 12 τεμ

[G] x 1 τεμ



[I] x 3 τεμ


[1] -6 x 55mm Bolt x 3 τεμ



[5] -Allen Key M4 x 1 τεμ




[2] -6 x 20mm Bolt x 8 τεμ



[6] -M6 Hex Nuts x 2 τεμ




[3] -6 x 45mm Bolt x 6 τεμ



[7] -Allen Key x 1 τεμ




[4] -6 x 35mm Bolt x 5 τεμ




[8] -Flat washers x 10 τεμ




BHMA1

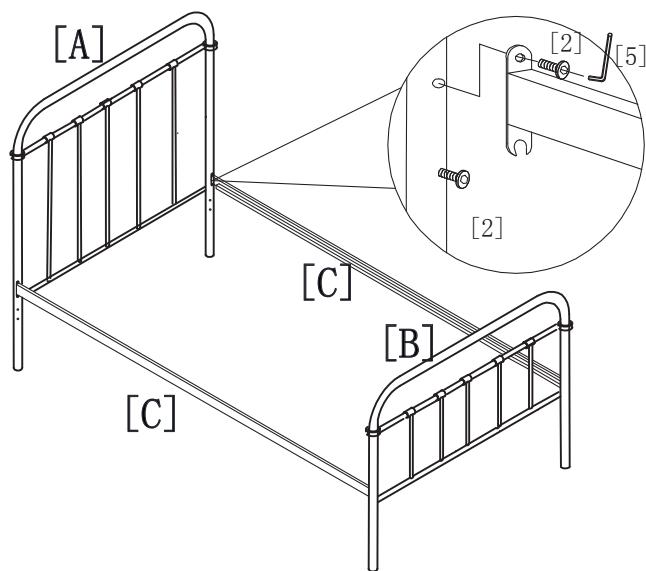


BHMA2

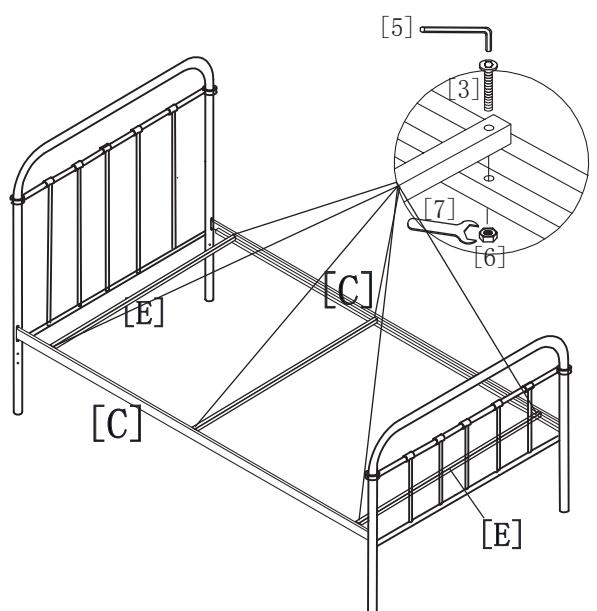

BHMA3

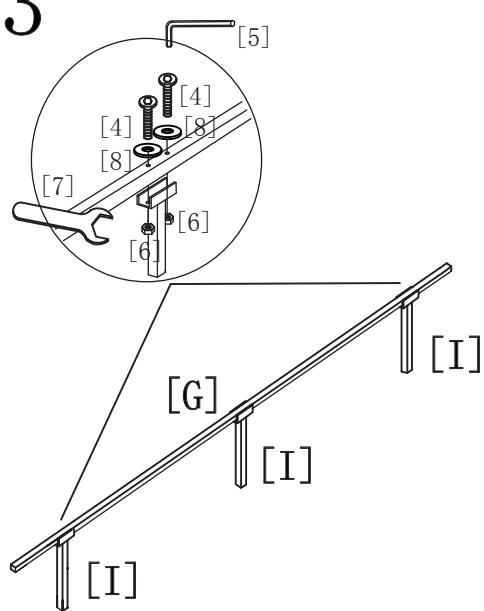

BHMA4

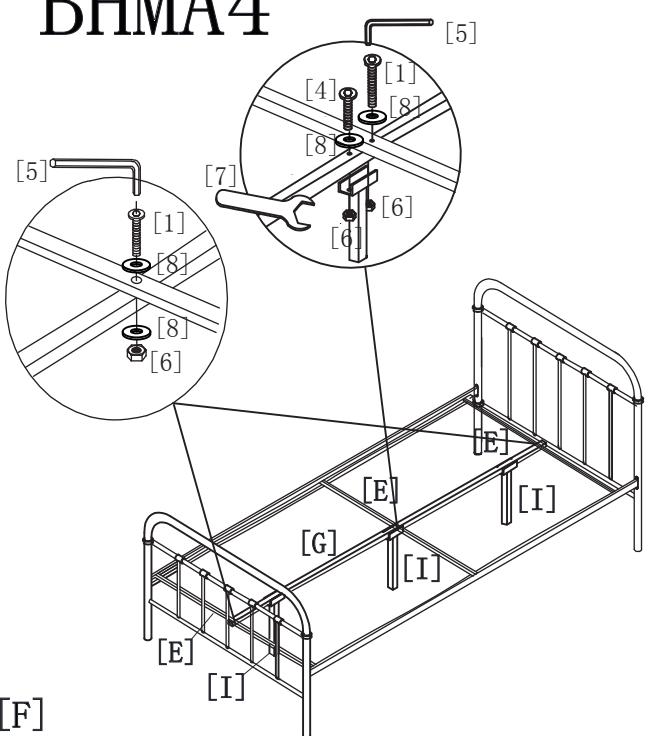

BHMA5

